



### Engine overheat warning indicator

#### 1. Check:

- Engine overheat warning indicator  
Does not operate → Replace the multi-function meter.

#### Checking steps:

- Start the engine.
- Disconnect the cooling water temperature sensor coupler ①.
- Check that the warning light comes on and that the engine overheat warning indicator is displayed.

### Exhaust temperature warning indicator

#### 1. Check:

- Exhaust temperature warning indicator  
Does not operate → Replace the multi-function meter.

#### Checking steps:

- Disconnect the exhaust temperature sensor coupler ①.
- Start the engine and warm it up for more than 2 minutes at 4,000 r/min.
- Check that the warning light and exhaust temperature warning indicator blink and that the buzzer sounds intermittently when the engine is started.