

- 4 Press down and hold the two release levers (callout 2) and pull the cover off of the printer.

Note

The back cover has two tabs (not shown), one on each side of the printer. Releasing the levers in step 4 releases these two tabs.

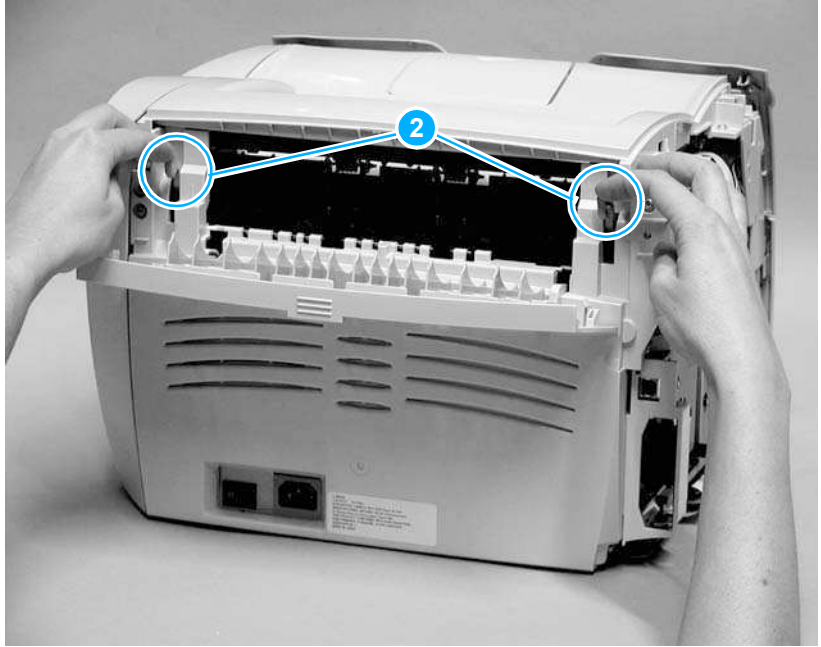


Figure 26. Removing the back cover (2 of 2)